

INTRODUCTION

Welcome to the Beast family! Thank you for putting your trust in our components. You have chosen one of the sturdiest, lightest, best quality products there is. Genuine craftsmanship - developed, designed and manufactured in Germany.

Your safety is very important to us, so please read this manual carefully before you install your new Beast Components product or ride it for the first time. Third party users must also be informed about the following provisions. Therefore, please keep these instructions in a safe place for later usage.

These operating instructions are intended for the user of the wheelset and includes information on the installation, handling, maintenance and care of the wheelset. Please follow all instructions.

Your Beast Components-Team

Release your Beast and share experiences with our community!
#beastcomponents #releaseyourbeast #beabeast



ATTENTION:

Incorrect handling, installation, maintenance or servicing can lead to accidents causing severe injuries or death!

WARRANTY & SERVICE



OUR PROMISE

We manufacture the highest quality products for your bike and also want to ensure the best possible service and support. Therefore we offer the original owner of Beast Components products a 5-year warranty and a lifetime crash replacement program for our entire product range.



PRODUCT REGISTRATION

To get the manufacturer's warranty and to participate in the crash replacement program, you must register your components. Send us an email with a copy of the invoice and the following information to registrierung@beast-components.de:

Name, First Name
Address
Phone number



5 YEARS MANUFACTURER WARRANTY

We vouch for the quality of our products „Made in Germany“. This is why we warrant our carbon products to be free from defects in material or workmanship for five years from the original purchase date (product registration required).

Modified, misplaced, misused, improperly installed or obviously abused Beast Components products are not covered by this warranty.

Based on this warranty, the company Black East GmbH is not liable for compensation, especially not for indirect damage caused by accidents, collateral damage and consequential damage.



LIFELONG CRASH REPLACEMENT

We offer the original owners of Beast Components products a lifetime crash replacement program that covers all damages (optical damages are excluded) outside of the warranty, whether self-inflicted or third-party caused (product registration required).

In this case we guarantee you a one-time discount of 50% on our recommended retail price if you decide to buy any new Beast Components product in the same product category.

Please note that VAT, packaging, shipping and installation costs and any import duties are not covered.

INTENDED USE

The intended use of Beast Components products is divided into six categories, from riding on paved roads to downhill and freeride use. Details can be found in the enclosed classification or at www.beast-components.de/service. Beast Components products may only be used within or below the intended category. Otherwise the user takes full responsibility.

CATEGORY 1 / ROAD: RS25, RX25, RR40, RX40, RX60, RX80

CATEGORY 2 / LIGHT GRAVEL: GR40

CATEGORY 3 / XC & HARD GRAVEL: GR25, XC25, XS30, XC30

CATEGORY 4 / TRAIL & ALL MOUNTAIN: TR30

CATEGORY 5 / ENDURO & HYBRID: ED30, HY30, HY35

CATEGORY 6 / DH: DH30

GENERAL INFORMATION

Our wheelsets are approved for tubular as well as tubeless systems.

Beast Components wheelsets are to be used exclusively with brake discs. When used with rim brakes, they will be seriously damaged, posing an enormous safety risk for the rider and third parties.

Modification of the wheelsets are not permitted and will void your warranty.

WEIGHT LIMIT

Except for the RS25 and the XS30, our rims are not subject to any weight limits. The system weight (bike, rider and equipment) of the RS25 and the XS30 should be a maximum of 115kg and must not be exceeded.

APPEARANCE

Our components are 100% handmade. Thereby it can come to different appearances. It makes each component unique and has no influence on the safety. By direct incidence of light you get a great view of the individual fibers with partly shimmering shades.


WHEELSET ASSEMBLY INFORMATION

The choice of components as well as the spoking pattern and the wheel construction itself influence the intended use of the entire wheel and can significantly restrict it. Beast Components therefore recommends to maintain the wheels by an experienced specialist. This will ensure a long and problem-free service life.

If your wheelset should need maintenance or service, you or your dealer will find information on the assembly of your wheelset in this section and in the table on the following page. If there are any questions, please contact us.


EFFECTIVE RIM DIAMETER (ERD)

The ERD is the direct distance between the opposite nipple seats. The ERD tolerance is +1mm. Please refer to the table on the next page for the exact ERD details of the respective rim.

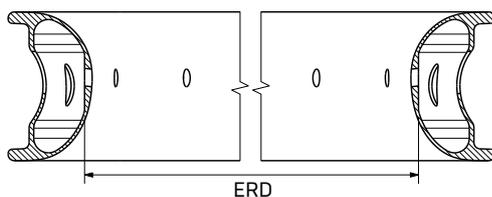

ASYMMETRY OF THE RIMS

Please note the possible asymmetry of the rim depending on the rim model (see table on next page). The asymmetrical offset must point away from the brake disc on the front wheel and away from the gear shift on the rear wheel to compensate for the flange offset of the hubs.

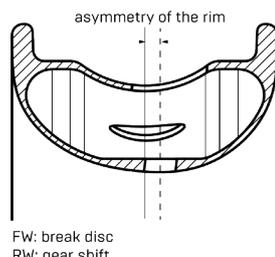

NIPPLE

For optimal power transmission, we recommend to use an external nipple „Sapim Polyax Double Square 14G 16mm“ with Secure Lock. These must be positioned between the nipple and the rim and must fit correctly on the inner surface of the rim.

WASHERS

When building up wheels with external nipples, it is essential to use washers called „MG Washer“ from Newmen. These must be positioned between the nipple and the rim and have to fit correctly on the inner surface of the rim.

It is recommended to apply grease between nipple and washer to prevent abrasion of nipple and washer.

SPOKE TENSION

The following maximum spoke tensions should neither be exceeded nor undercut. Otherwise the spokes may break or the rim may be damaged.

	maximum allowable spoke tension of the higher tensioned wheel side [N]
XS30	900
all others	1200

TOLERANCES

The following maximum tolerances should not be exceeded or undercut.

		lateral runout [mm]	radial runout [mm]	concentricity [mm]
ROAD	RS, RX, RR	± 0,2	± 0,2	± 0,2
GRAVEL	GR,	± 0,25	± 0,2	± 0,2
MTB	XC, XS	± 0,25	± 0,2	± 0,2
	TR, ED, DH	± 0,3	± 0,2	± 0,3
	HY	± 0,4	± 0,2	± 0,3

		categories	weight limit	asym. offset (mm)	ERD (mm)	spokes used		nipple	washer
ROAD	RS25 700C 24 holes	1	115kg	-	587	Sapim CX-Ray & Sprint (RW drive side)		internal	-
	RX25 700C 24 holes	1	-	-	587	Sapim CX-Ray & Sprint (RW drive side)		internal	-
	RR40 700C 24 holes	1	-	-	557	Sapim CX-Ray & Sprint (RW drive side)		internal	-
	RX40 700C 24 holes	1	-	-	557	Sapim CX-Ray & Sprint (RW drive side)		internal	-
	RX60 700C 24 holes	1	-	-	517	Sapim CX-Ray & Sprint (RW drive side)		internal	-
	RX80 700C 24 holes	tba	tba	tba	tba	tba		tba	tba
GRAVEL	GR40 700C 24 holes	2	-	-	557	Sapim CX-Ray & Sprint (RW drive side)		internal	-
	GR25 650B 24 holes	3	-	2	550	Sapim CX-Ray & Sprint (RW drive side)		internal	-
	GR25 700C 24 holes	3	-	2	587	Sapim CX-Ray & Sprint (RW drive side)		internal	-
MTB	XC25 27,5" 28 or 32 holes	3	-	2	550	Sapim CX-Ray & Sprint (RW drive side)		internal	-
	XC25 29" 28 or 32 holes	3	-	2	587	Sapim CX-Ray & Sprint (RW drive side)		internal	-
	XS30 29" 28 or 32 holes	3	115kg	2	596	Sapim D-Light		external	yes
	XC30 27,5" 28 or 32 holes	3	-	2	551	Sapim D-Light		external	yes
	XC30 29" 28 or 32 holes	3	-	2	587	Sapim D-Light		external	yes
	TR30 27,5" 28 or 32 holes	4	-	2	550	Sapim D-Light		external	yes
	TR30 29" 28 or 32 holes	4	-	2	587	Sapim D-Light		external	yes
	ED30 27,5" 28 or 32 holes	5	-	2	551	Sapim D-Light		external	yes
	ED30 29" 28 or 32 holes	5	-	2	587	Sapim D-Light		external	yes
	HY30 27,5" 28 or 32 holes	tba	tba	tba	tba	tba		tba	tba
	HY30 29" 28 or 32 holes	tba	tba	tba	tba	tba		tba	tba
	HY35 27,5" 28 or 32 holes	5	-	3	550	Sapim Force		external	yes
	HY35 29" 28 or 32 holes	5	-	3	588	Sapim Force		external	yes
	DH30 27,5" 28 or 32 holes	6	-	2	552	Sapim Force		external	yes
DH30 29" 28 or 32 holes	6	-	2	590	Sapim Force		external	yes	

INSTALLATION



GENERAL INFORMATION

Before installation, make sure that the installation dimension of the hub fits your fork and frame.

Please read the hub instructions carefully before installing the wheelset. You can find these under:

<https://www.dtswiss.com/en/support/manuals>

Only use valves with a suitable diameter and sufficient length. The valve hole must not be modified.

Do not use metal tire levers. These can damage the surface of the rim, the tire or the tube.



Attention: Maximum tire pressure

The maximum tire pressure of the wheel and the tire used must not be exceeded. Details can be found in the enclosed note „Tire Pressure“ or at www.beast-components.de/en/service.

FITTING TIRES WITH A TUBE

Attach the rim tape. Assemble the inner tube and tire according to the manufacturer's specifications. We recommend using soapy water or installation fluid. Pump the tires up to their maximum approved pressure. The lower of the pressures specified for the rim or tire applies (Details can be found in the enclosed tire pressure information or at www.beast-components.de/service). Check the tire seat. The tire must contact the rim evenly around its entire circumference. Have the tire seat checked by a professional if in any doubt. If necessary, reduce the tire pressure to the desired operating pressure.

FITTING THE TIRES WITHOUT A TUBE

Make sure that the tubeless tape and a tubeless valve are mounted. The Tubeless Tape and the valve must be used in the width and height suitable for the rim. Please refer to the tables on the next page.

Put sealant fluid into the tires. Comply with the instructions of the sealant manufacturer. Assemble the wheels according to the manufacturer's specifications. We recommend using soapy water or installation fluid.

Pump the tires up to their maximum approved pressure. The lower of the pressures specified for the rim or tire applies (Details can be found in the enclosed tire pressure information or at www.beast-components.de/service). Check the tire seat. The tire must contact the rim evenly around its entire circumference. Have the tire seat checked by a professional if in any doubt. If necessary, reduce the tire pressure to the desired operating pressure.

	tubeless tape wide
RR40	22 mm
RS25, RX25, RX40, RX60, RX80	23 mm
GR40, GR25, XC25	27 mm
XS30, XC30, TR30, ED30, DH30,	32 mm
HY35	37 mm

	minimum valve length
RX80	91 mm
RX60	71 mm
RX40, RR40, GR40	51 mm
RX25, GR25, XC25, XC30, TR30, ED30, DH30, HY30, HY35	36 mm
XS30	31 mm

ASSEMBLING THE CASSETTE

Choose the cassette suitable for the freewheel XD, XDR, Shimano HG, Microspline or Campagnolo and assemble the cassette according to the manufacturer's instructions.

BRAKE DISC

Assemble the brake disc according to the manufacturer's instructions.

WHEEL

Ensure that the hub sits on the stop in the end of the dropout. Observe the instructions provided by the manufacturer of the quick-release clamp or the quick-release axle.

Check that the wheel is attached correctly before each ride.

MAINTENANCE AND CARE

Please always make sure that your Beast Components product is intact before each ride. Damage can cause the component to fail, resulting in serious injury or even death. Damaged components should never be ridden on and should be replaced immediately. If you are in doubt, contact us or a experienced specialist.

The following aspects should always be taken into account:

Task	Interval
Check Tubeless Tape for damages	every 6 months
Replace the Tubeless Tape	every 12 months
Check spoke tension, runout and wear of the wheel	every 10 operating hours
Check rim for damage	before and after each ride
Clean with soft cloth and a suitable cleaner.	after each ride
Attention: Do not use high pressure cleaners or aggressive cleaning agents!	
Check that the wheels are secured correctly and Check air pressure	before each ride



DISPOSAL AND ENVIRONMENTAL PROTECTION

The statutory regulations shall apply. Whenever possible, avoid creating waste. Waste, especially carbon, lubricants, cleaners and any other fluids must be disposed in an environmentally compatible manner.

CONTACT

Black East GmbH
Beast Components
Hermann-Mende-Str. 5-7
01099 Dresden, Germany
+49 351 501 937 00
info@beast-components.de
www.beast-components.de