



## INTRODUCTION

Welcome to the Beast family! Thank you for putting your trust in our components. You have chosen one of the sturdiest, lightest, best quality products. Genuine craftsmanship - developed, designed and manufactured in Germany.

Your safety is very important to us, so please read this manual carefully before you install your new Beast Components products or ride it for the first time. Third party users must also be informed about the following provisions. Therefore, please keep these instructions in a safe place for later usage.

These operating instructions are intended for the user of all our saddles and include information on the installation, maintenance and care. For your own safety please follow all instructions. The instruction manuals of all other components on your bike should also be taken into account.

Your Beast Components-Team

**Release your Beast and share experiences with our community!  
#beastcomponents #releaseyourbeast #beabeast**



### ATTENTION:

Incorrect handling, installation, maintenance or servicing can lead to accidents causing severe injuries or death!

## WARRANTY & SERVICE



### OUR PROMISE

We manufacture the highest quality products for your bike and also want to ensure the best possible service and support. Therefore we offer the original owner of Beast Components products a 5-year warranty and a lifetime crash replacement program for our entire product range.



### PRODUCT REGISTRATION

To get the manufacturer's warranty and to participate in the crash replacement program, you must register your components with us. Send us an email with a copy of the invoice and the following information to [registrierung@beast-components.de](mailto:registrierung@beast-components.de):

Name, First Name  
Address  
Phone number



### 5 YEARS MANUFACTURER WARRANTY

We vouch for the quality of our products „Made in Germany“. This is why we warrant our carbon products to be free from defects in material or workmanship for 5-years from the original purchase date (product registration required).

Modified, misplaced, misused, improperly installed or obviously abused Beast Components products are not covered by this warranty.

Based on this warranty, the company Black East GmbH is not liable for compensation, especially not for indirect damage caused by accidents, collateral damage and consequential damage.



### LIFELONG CRASH REPLACEMENT

We offer the original owners of Beast Components products a lifetime crash replacement program that covers all damages (optical damages are excluded) outside of the warranty, whether self-inflicted or third-party caused (product registration required).

In this case we guarantee you a one-time discount of 50% on our recommended retail price if you decide to buy any new Beast Components product in the same product category.

Please note that VAT, packaging, shipping and installation costs and any import duties are not covered.

## INTENDED OF USE

The intended use of Beast Components products is divided into six categories, from riding on paved roads to downhill and freeride use. Details can be found in the enclosed classification or at [www.beast-components.de/en/service](http://www.beast-components.de/en/service). Beast Components products may only be used within or below the intended category. Otherwise the user takes full responsibility.



### SADDLE PURE, GRIP & COMFORT

Includes category 3, as well as rides on rougher unpaved terrain with sporadic jumps of up to 0.5 m, where the wheels are in constant contact with the ground or briefly lose contact with the ground due to bumps such as roots. Larger obstacles and higher speeds require increased riding skills.

### GENERAL INFORMATION

Damage can lead to failure of the component and thus to serious injury or even death. Externally damaged or defective components must not be used under any circumstances and must be replaced immediately. If you are unsure, contact us or your dealer.

#### WEIGHT LIMIT

The saddles Pure, Grip and Comfort are approved up to a maximum rider weight of 90 kg.

#### APPEARANCES

Our components are 100% handmade. Thereby it can come to different appearances. It makes each component unique and has no influence on the safety. By direct incidence of light you get a great view of the individual fibers with partly shimmering shades.

### INSTALLATION



#### INSTALLATION COMPATIBILITY

The functional principle, the clamping forces and the quality of workmanship, especially the contact surfaces and edges of the seat post can affect the durability of the saddle or its saddle frame and possibly cause damage.



#### ATTENTION:

If the above points are not observed, the product safety may be affected and damage resulting in breakage is possible. In such a case, the saddle frame could suddenly and abruptly break during use and cause an accident.

Therefore, be sure to note any special requirements in the instructions for use of the seat post and never mount your Beast Components saddle on unsuitable seat posts, and only on seat posts that meet the criteria below:

- The saddle struts have a high oval diameter of 7 mm x 9 mm. Only use seat posts that are designed for high-oval struts with this diameter, so that the saddle struts fit into the clamping device without play.
- The length of the upper clamping surface must be at least 32 mm.
- If the lower clamping surface is divided, then the minimum length of each individual clamping surface must be at least 7 mm.
- Clamping of the saddle frame with non opposite clamping jaws or clamping surfaces is to be avoided in all cases. Otherwise, the saddle frame is subjected to a bending stress that can lead to premature failure or sudden breakage during use and thus to an accident.
- Considering that the saddle has a very flexible seat shell, there should be a gap of at least 10 mm between it and the saddle head of the seat post.
- Assembly of the saddle using a so-called saddle block should be avoided. The clamping surfaces are usually unfavourably short and small, so that reliable clamping of the saddle without damaging the saddle frame cannot be guaranteed.

### INSTALLATION AND ADJUSTMENT OF THE SADDLE

- First install the saddle in the center of the clamping area and observe the maximum tightening torque of 5Nm.
- You should also observe the specifications and the maximum tightening torque of the manufacturer of the seatpost.
- The saddle must only be clamped in the straight area of the struts.
- Vary the setting according to your needs, starting from the center position and moving forward and backward within the adjustment range.

The setting of the optimum saddle position can be very different for each individual. It may require some time and repeated testing. Information on the correct adjustment of the saddle can be found in a variety of literature and guidebooks on the subject of bicycle ergonomics. If you do not feel confident in mounting the saddle, please contact your specialist dealer, referring to this instruction manual.

### MAINTENANCE AND CARE

Always inspect your Beast Components product for integrity before riding. Damage can lead to component failure, resulting in serious injury or even death. Defective components should not be driven on under any circumstances and should be replaced immediately. If you are unsure, contact us or a specialist dealer.

The following issues should always be considered:

- Carefully check the surface of the saddle and the seat stays for possible damage regularly, at least twice a year, after 2000 km at the latest and especially after crashes or other situations that exert unusually high force.
- Clean the saddle regularly with water and a soft cloth. If the saddle is very dirty, you can also use a commercially available washing-up liquid or detergent and warm water.

Proper maintenance and care ensure a long service life and reliable function.



#### DISPOSAL AND ENVIRONMENTAL PROTECTION

The statutory regulations shall apply. Whenever possible, avoid creating waste. Waste, especially carbon, lubricants, cleaners and any other fluids must be disposed in an environmentally compatible manner.

### CONTACT

Black East GmbH  
Beast Components  
Hermann-Mende-Str. 5-7  
01099 Dresden, Germany  
+49 351 501 937 00  
info@beast-components.de  
www.beast-components.de